 
 
 
 
 



Timer-Lamp, break-down checking in blinking sign.

Check the break-down factor from the frequency of timer-lamp blinking.

No.	Mode of Timer-Lamp blinking	Indication Factor	Estimated Break-Down Part
1	 1 time	<u>4-way valve not working</u> Inside temperature is low in heating operation time or inside temperature is high in cooling operation time.	(1) 4-way valve is not working. (2) Heat-exchanger thermistor is in disconnection. (Only heating time)
2	 2 times	<u>Outdoor unit operating by compulsion</u> Outdoor unit is under forcible operation or under balancing after forcible operation.	Outdoor electrical goods.
3	 13 times	<u>IC 401 Data read wrongly</u> In case that data read from IC401 is wrong.	IC401 is not in order.
4	 14 times	<u>Heat exchanger thermistor error</u> Heat exchanger thermistor open or short-circuit detected.	(1) Thermistor (2) Indoor - control circuit board.
5	 15 times	<u>Room thermistor error</u> Room thermistor error open or short-circuit detected.	(1) Thermistor (2) Indoor - control circuit board.

( -- 0.5 second on, 0.5 second off.)