

SWSB Error code

Function of indicator light

1、Nixie display indicator

If coil temp sensor is broken, and then there is no error code displayed on the nixietube.

When the unit is on, nixie display indicator shows the room temp.

When the remote handset changes its command, and then the nixietube will flash and display the setting temp, the time interval is 0.5sec. and after 3 times it flashes, it will return to show the room temp.

Nixietube display error

Item No.	1	2	3	4
Error	room temp.error	coil temp.error	room temp. sensor + coil temp. sensor	PG motor damaged
Error display	E0	E1	E3	E4
Protection	anti-freezing protection in cooling mode	super high temp protection	post-heat	pre-heat
Protection display	P0	P1	P3	P4

2、LED lights

Status	Power(green)	Protect (red)	Run(green)	Timer(yellow)
Unit is off with power supply	off	off	off	timer function is set, the light is on. Timer function is not set, the light is off.
Unit on	on	off	off	timer function is set, the light is on. Timer function is not set, the light is off.
2-way valve on	on	off	on	timer function is set, the light is on. Timer function is not set, the light is off.
Low temperature coil protection	on	blink	off	timer function is set, the light is on. Timer function is not set, the light is off.
Post-heat	on	off	blink	timer function is set, the light is on. Timer function is not set, the light is off.
Pre-heat	on	on	blink	timer function is set, the light is on. Timer function is not set, the light is off.
Over heat indoor coil protection	on	blink	on	timer function is set, the light is on. Timer function is not set, the light is off.
Coil Temperature sensor damaged	on	blink	blink	timer function is set, the light is on. Timer function is not set, the light is off.
Room Temperature sensor damaged	on	on	on	timer function is set, the light is on. Timer function is not set, the light is off.
PG motor damaged	on	blink	blink	blink