


## Signal Receptor

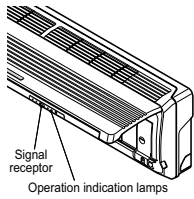

Receives the signals from the remote controller. (Signal receiving sound: two short beeps or one long beep.)

### Operation Indication Lamps

- ⓪ On/Off : Lights up during the system operation.
- ☆ Sleep Mode : Lights up during Sleep Mode Auto operation.
- ⌚ Timer : Lights up during Timer operation.
- \* Defrost Mode : Lights up during Defrost Mode or Hot Start operation (Heat pump model only)
- ⊕ OUTDOOR UNIT OPERATION : Lights up during outdoor unit operation. (Cooling model only)

## Self-diagnosis Function

### ■ Error Indicator

- The function is to self-diagnosis airconditioner and express the troubles identically if there is any trouble.
- Error mark is ON/OFF for the operation LED of evaporator body in the same manner as the following table.
- If more than two troubles occur simultaneously, primarily the highest trouble fo error code is expressed.
- After error occurrence, if error is released, error LED is also released simultaneously.
- To operate again on the occurrence of error code, be sure to turn off the power and then turn on.
- Having or not of error code is different from Model.

Error Code	Error LED (Indoor body operation LED)	Error contents	SVC check point
1		• Indoor air temperature thermistor open/short.	• Indoor air TH ass'y check
2		• Indoor inlet pipe temperature thermistor open/short.	• Indoor inlet pipe TH ass'y check
5		• Poor communication	• Communication line/circuit
6		• Indoor outlet pipe temperature thermistor open/short	• Indoor outlet pipe TH ass'y check
7		• Defferent Operation (Simultaneous operation of cooling and heating.	• Operate indoor units only heating or cooling mode.
9		• Indoor EEP ROM data (Art type only)	• Replace main PCB DC ASM
44		• Outdoor air temperature thermistor open/short	• Outdoor air TH ass'y check
45		• Outdoor pipe temperature thermistor open/short	• Outdoor pipe TH ass'y check
51		• Overload combination	• Indoor unit combination check (Refer to Max. capacity)

- ☆ : ten digits
- ⓪ : one digits