

Units with digital display		
Error code	Version №1	Version №2
E0	Mode conflict	Outdoor unit fault
E1	Communication indoor/outdoor units	
E2	Room temperature sensor fault (T1)	
E3	Pipe temperature sensor fault (T2)	
E4	Pipe temperature sensor fault (T2B)	
E6		Mode conflict
E7	EEPROM fault	
EE	Water level checking fault	
Ed	Outdoor unit fault	

Units with LED display				
	Run	Timer	Pre/Def	Alarm
Outdoor unit fault	O	O	O	S
Communication indoor/outdoor units		X	O	O
Room temperature sensor fault (T1)	X	O	O	O
Pipe temperature sensor fault (T2)	X	O	O	O
Pipe temperature sensor fault (T2B)	X	O	O	O
mode conflict	O	O	X	O
EEPROM fault	O	O	O	S
watel level fault	O	O	O	X
stand-by	S	O	O	O
slow flashing	S			
quick flashing	X			
off	O			